



 
smile 😊 makers
THE ARTIST

Sketch Book

DISCOVER YOURSELF

Sexual wellness is a life hack. Feel-good sensations, better sleep, stress relief... you get the point.

From sensual tingles to toe-curling climaxes, enjoy exploring new pleasure possibilities with us.

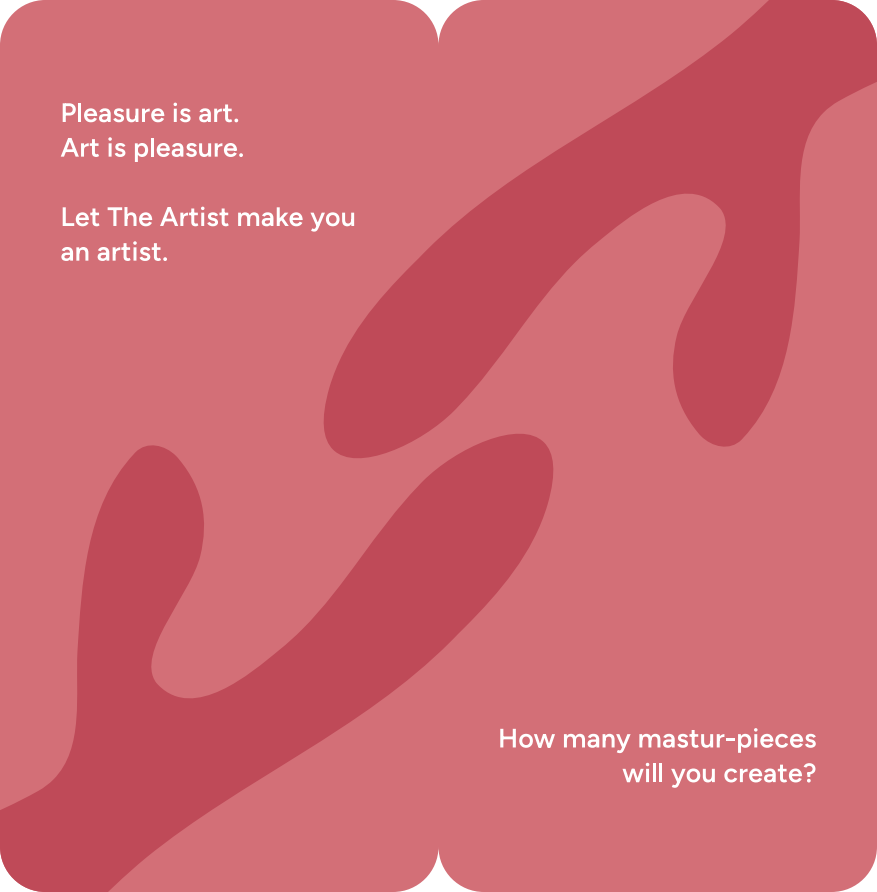


Pleasure is art.
Art is pleasure.


Let The Artist make you
an artist.

How many mastur-pieces
will you create?


First Strokes

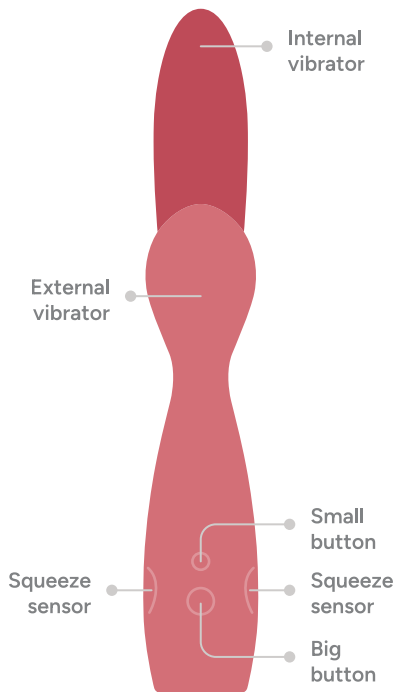


To turn ON The Artist, click the big button once. It will start on squeeze sensor mode.

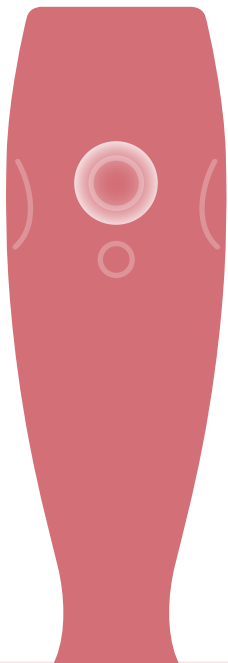


To increase the intensity, press on either squeeze sensor located on the sides.

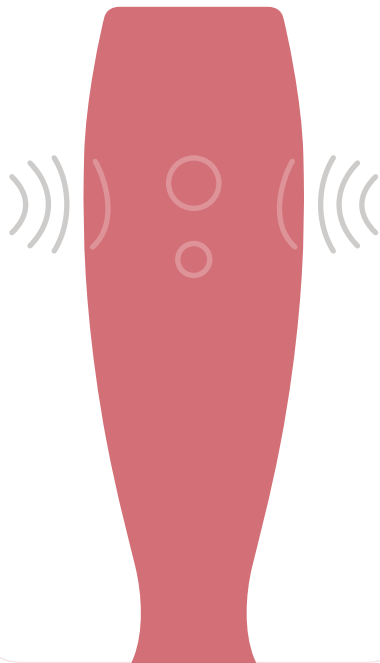

To navigate through the 9 pulsation modes, click on the big button to cycle forward and the small button to cycle back.

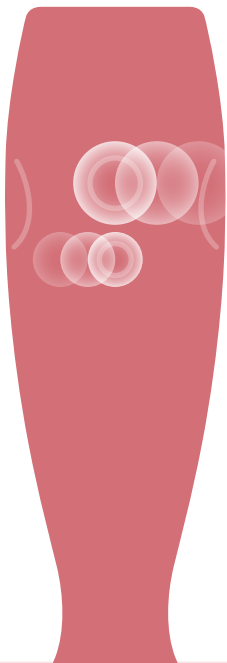

To turn OFF The Artist, press long on the small button.

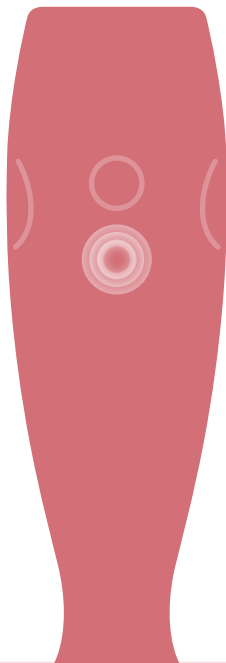

Light indication



When the light starts blinking, it means the vibrator is low on battery. Plug the USB charger to recharge.

Light indication




When charging, the light stays constantly lit. It turns off when fully charged.

Personalized Pleasure

The Artist has 2 separate vibrators to double your pleasure

Internal vibrator


- Adjustable angle
- Customized fit
- Vaginal or anal stimulation

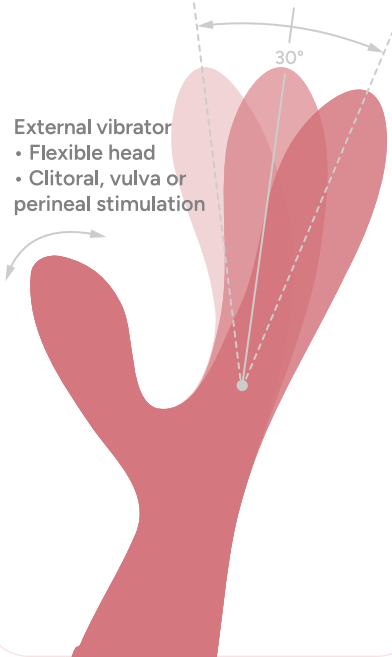

Squeeze Sensor Mode

To smoothly increase vibration intensity, squeeze the sensors.

Lock and unlock your preferred intensity by pressing on either of the squeeze sensors and the big button simultaneously.

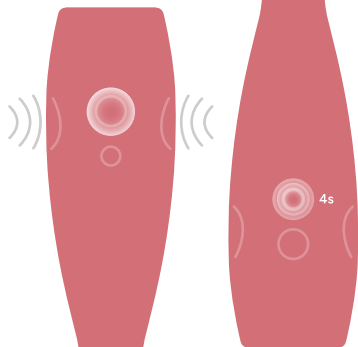

Activate or deactivate the travel lock by pressing for 4s on the small button when the device is OFF.

9 Pulsation Modes

Alternating

The vibrations are moving in and out between the internal and external vibrators.



Roller coaster



Table tennis

Blend

The vibrations in the internal and external vibrators are different.



Sweet cocktail




Spicy cocktail

Synchronized

The vibrations in the internal and external vibrators are the same and synchronized.



Quiver

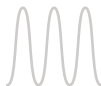

Climax



Spiral



Heartbeat




Cha-cha-cha

Create Your Own Settings

Turn On Creative Control

You can create your own setting by matching different modes for the 2 vibrators.

To start, press and hold on the small and big buttons at the same time. The light will turn on and fade away.

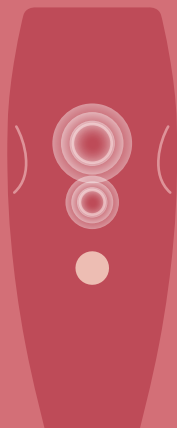


The big button controls the internal vibrator

The small button controls the external vibrator



Create Your Own Settings

Your Pleasure Palette

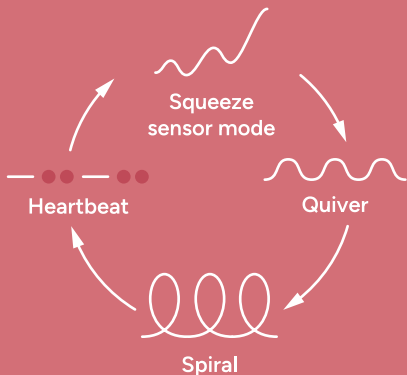

Customize your own pair of stimulations:

- 2 vibrators
- 4 different modes
- 16 additional possibilities for a climactic moment

To navigate the pleasure palette, click once on each button to cycle through the 4 modes.

Click on the small button to control the external vibrator.

Click on the big button to control the internal vibrator.



Dual Sensations


The Artist embraces the entire clitoral structure, from its super sensitive glans to its internal part moving against the vagina. It can also be used for anal stimulation.

- Clitoral glans
 - Visible part of the clitoris
 - Richly innervated
 - Highly sensitive


G-area

Vaginal canal

Anus and perineal area

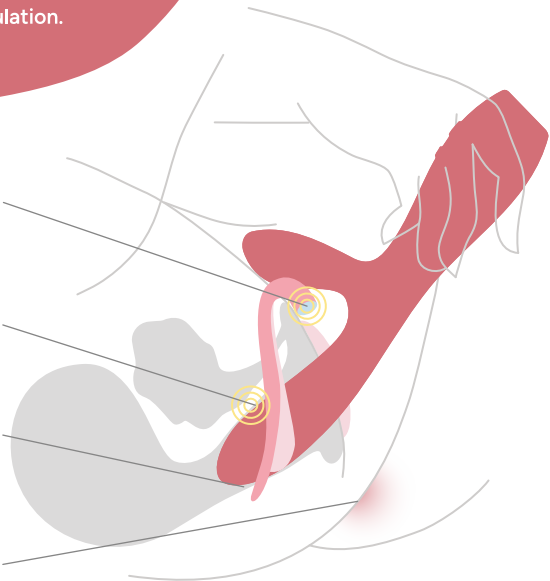


Tease Yourself

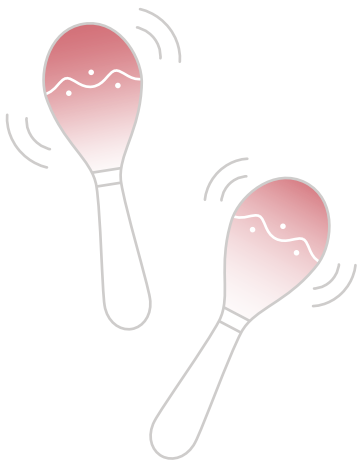

Some of the modes we have created deliver playful movements either on both vibrators or from one vibrator to the other. Experiment with them to build up arousal!

Couture Pleasure

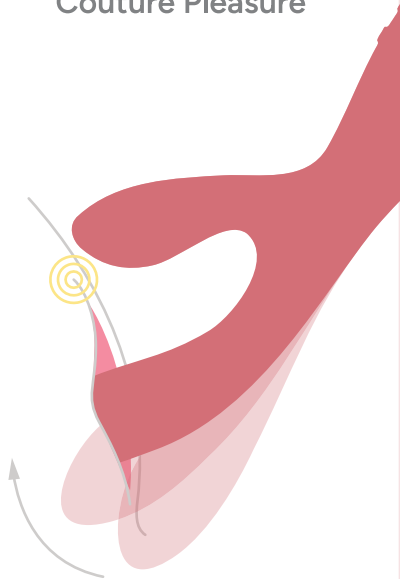


Once you have placed the shorter head onto the clitoris, you can adjust the angle with longer head. At a smaller angle, you can insert the longer head into the vagina.

External Exclusively



You can also adjust the angle to have the smaller head on the clitoris and the longer head between the butt cheeks.

Wriggle Inside

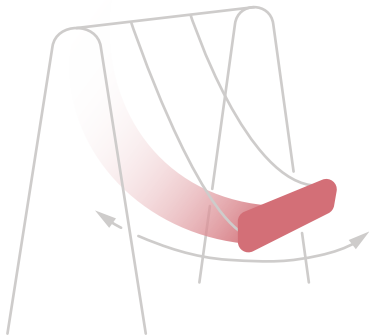


When you use the product internally, create gentle in and out motions to mimic penetrative sex. With penetrative use, apply lubricant to cushion up.

Perineal Play




If you want a gentle tease around the anus, you can place the shorter head between the butt cheeks. The longer head can be used for vaginal stimulation.

Doubling Down

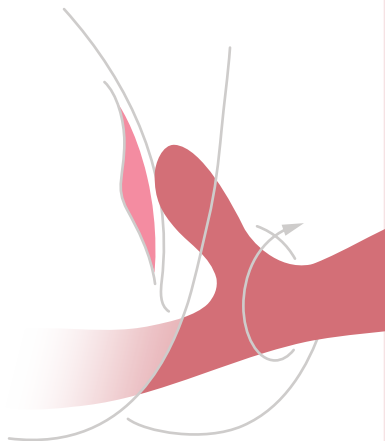

You can also insert the longer head into the anus while positioning the shorter head on the vaginal entrance. Use lube for extra comfort and pleasure.

Vibrator Hygiene

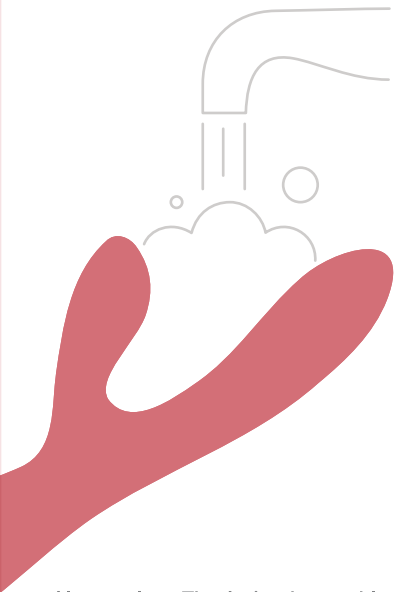

Always clean The Artist thoroughly before and after each use. Wash with lukewarm water and pat dry with a lint-free cloth or towel.

Scan for
more tips



What does pleasure look to you?
Create your own erotic art!

Send us a picture
@SmileMakersCollection on IG
and stand a chance to win a FREE
Smile Makers vibrator.

