A new vibrator is a bit like a new partner...



... it's worth getting to know each other first.

First Things First



To turn it on, click on the button



Light blinking =Low battery



Click again to navigate between the 3 speeds and 1 pulsation mode




Charging



To turn off, press and hold the button. To turn on/off the travel lock, press again for 4s



Sweet Spots

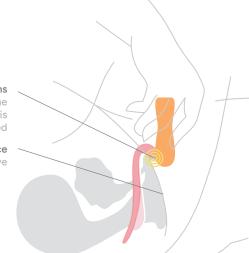

Clitoral glans
• Visible part of the

- clitoris
- Richly innervated

Vaginal entrance

Highly sensitive

DISCOVER YOURSELF

 
Remember that your vibrator is a device, but your body isn't! What brings pleasure varies between vulva owners, and from one day to the next. Keep on exploring yourself, be curious about your sensations and renew the experience every time.

Just like you would for good partner sex!

Pleasure Tips



Apply its rounded head with the little fins on the clitoral glans and play with the 3 speeds + 1 pulsation mode.



Use The Surfer for shallow vaginal penetration to tickle the highly sensitive lower vagina.



If direct contact feels too intense, add a layer of fabric in-between the clitoris and The Surfer.



Introduce The Surfer for partner sex to enhance intercourse or expand outercourse.

Vibrator Hygiene



Needless to say, your Surfer loves the water. To keep it clean and happy, wash it with water and soap, then pat it dry. We recommend doing this before and after use.



Scan for more tips

Wanna Duet?

Join us in breaking taboos.
For a chance to be featured,
show off your new hot lover
or share where you keep your
new vibe by tagging us:

@SmileMakersCollection Your daily dose of sex positivity





smile comakers



GET ACQUAINTED
WITH YOUR
SURFER