A new vibrator is a bit like a new partner...



First Things First



To turn it on, click on the button

Light blinking

=Low battery



Click again to navigate between the 4 speeds and 2 pulsation modes



Charging




To turn off, press and hold the button. To turn on/off the travel lock, press again for 4s



Fully charged

Court Zones

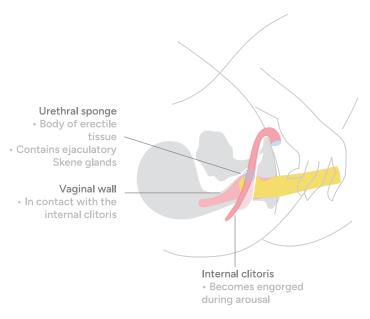

DISCOVER YOURSELF

Remember that your vibrator is a device, but your body isn't! What brings pleasure varies between vulva owners and from one day to the next. Keep on exploring yourself, be curious about your sensations and renew the experience every time. Just like you would for good partner sex!

Pleasure Tips



Apply the rounded head on your clitoral glans to stimulate the clitoris directly, which will then get engorged.



When you feel ready, gently insert The Tennis Pro inside the vagina with its rounded head facing the front wall, towards the pubis.



Explore! What is commonly known at the G-spot is not the same for everyone and it may even move over time, so get curious.



Once you've found that sensitive area, massage it softly at first using the rounded head. Then, gradually increase pressure and speed.

Vibrator Hygiene




Your Tennis Pro may be a master at the net, but it can also go for a swim. To keep it clean and happy, wash it with water and soap, then pat it dry. We recommend doing this before and after use.



Scan for more tips

Wanna Duet?

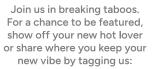

@SmileMakersCollection Your daily dose of sex positivity





smile comakers



GET ACQUAINTED
WITH YOUR
TENNIS PRO